










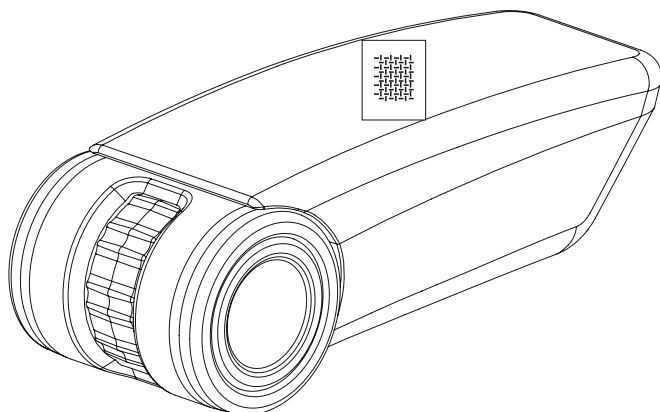


# RENAULT EXPRESS VAN 2021- LHD




(WITHOUT original elbowrest)





<b>1</b> 1x F00655	<b>2</b> 1x A11171	<b>3</b> 1x A10451	<b>4</b> 1x M8x160	<b>5</b> 1x A10435	<b>6</b> 2x M6x16	<b>7</b> 1x M4x12	<b>8</b> 2x M6
<b>9</b> 1x M4	<b>10</b> 1x M4	<b>11</b> 1x 140x3,6	<b>12</b> 1x A11152	<b>13</b> 1x M10x25	<b>14</b> 1x M10x20	<b>15</b> 2x M10	

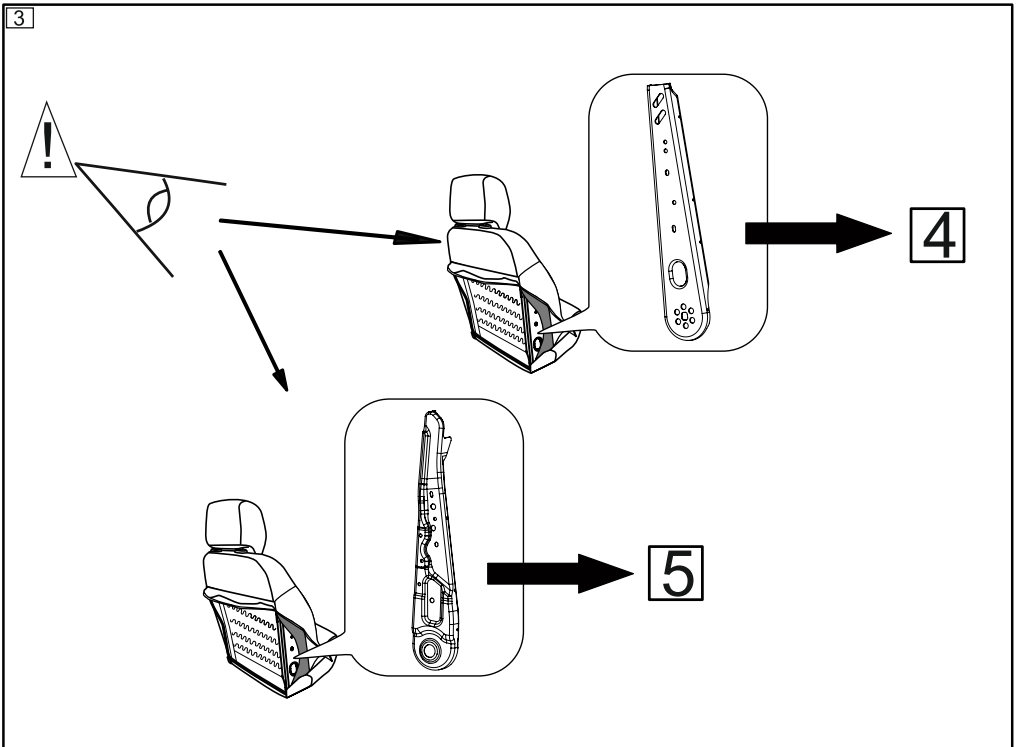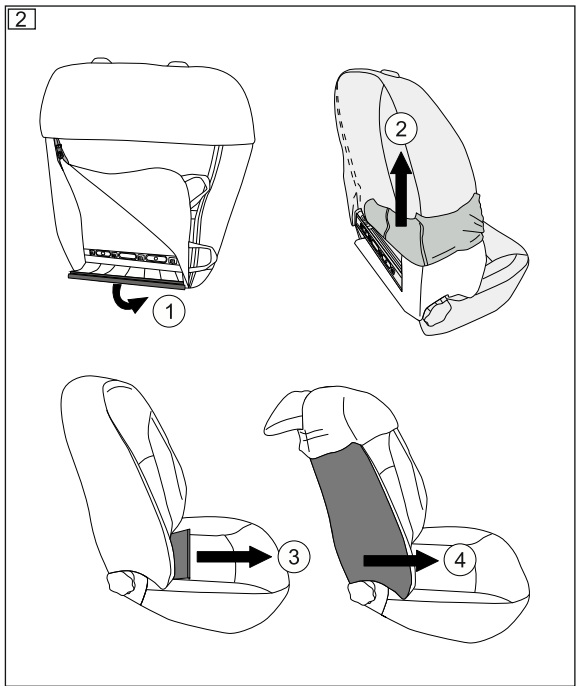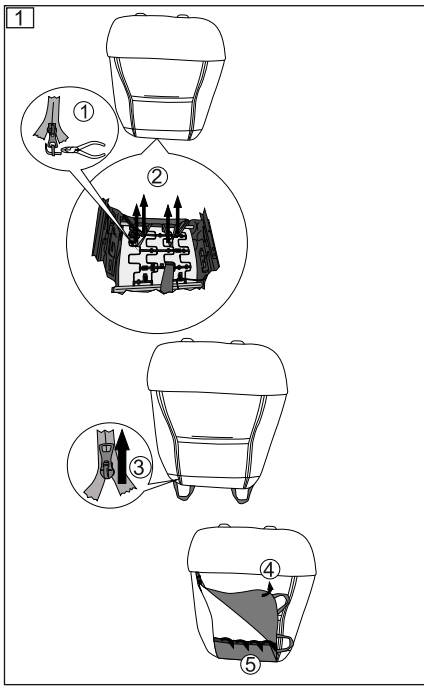





4

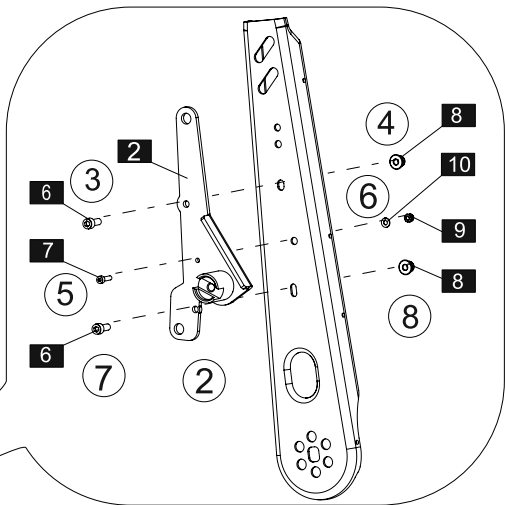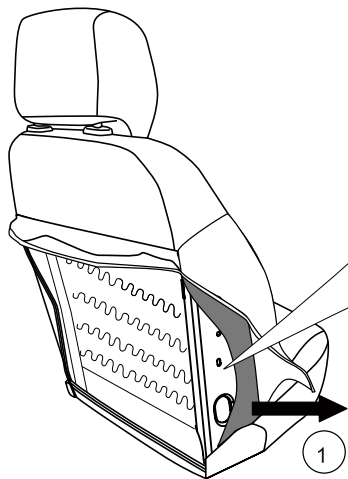






5

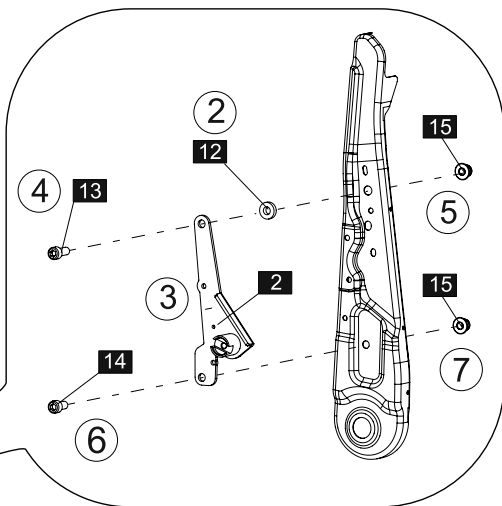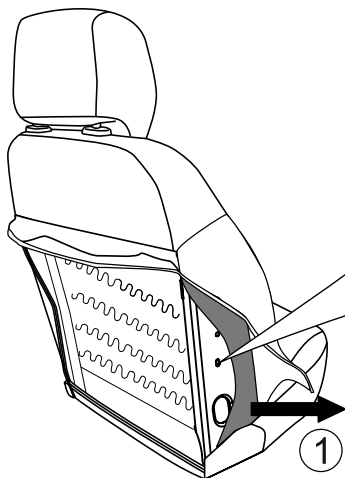


6

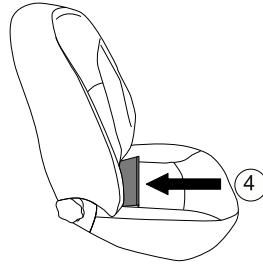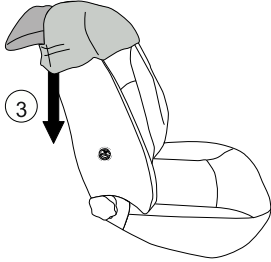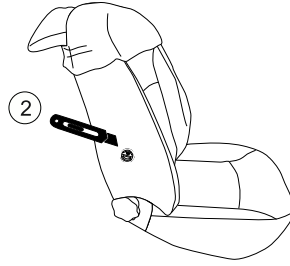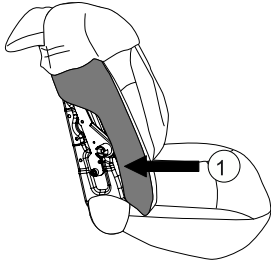


7

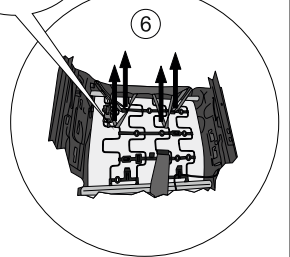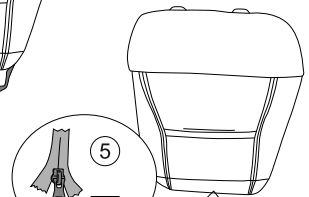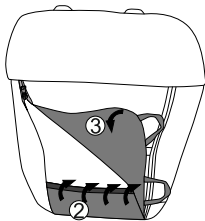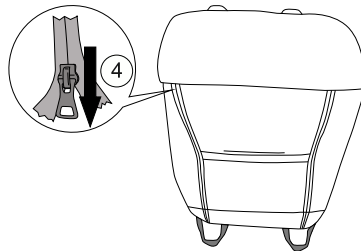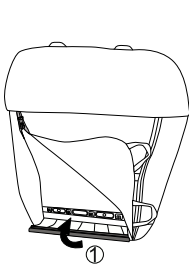


8

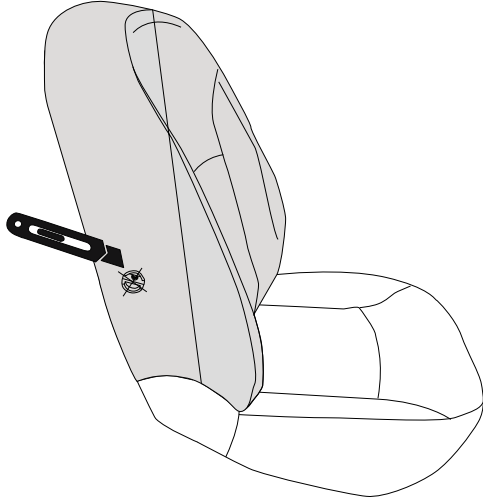

9

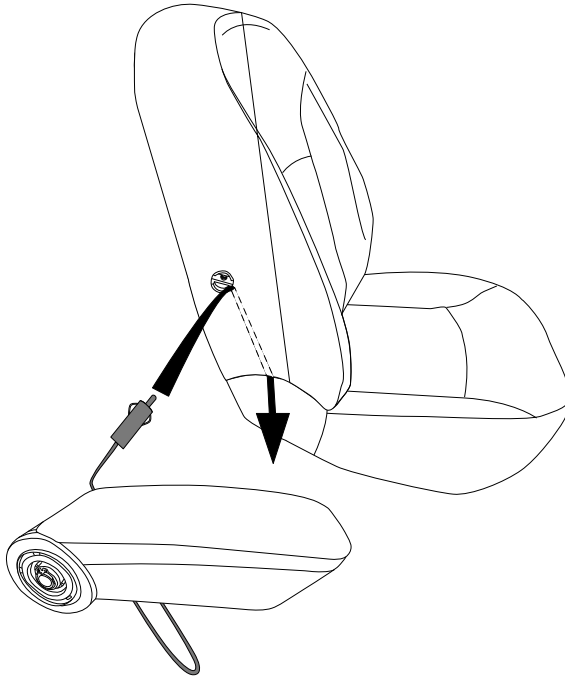

10

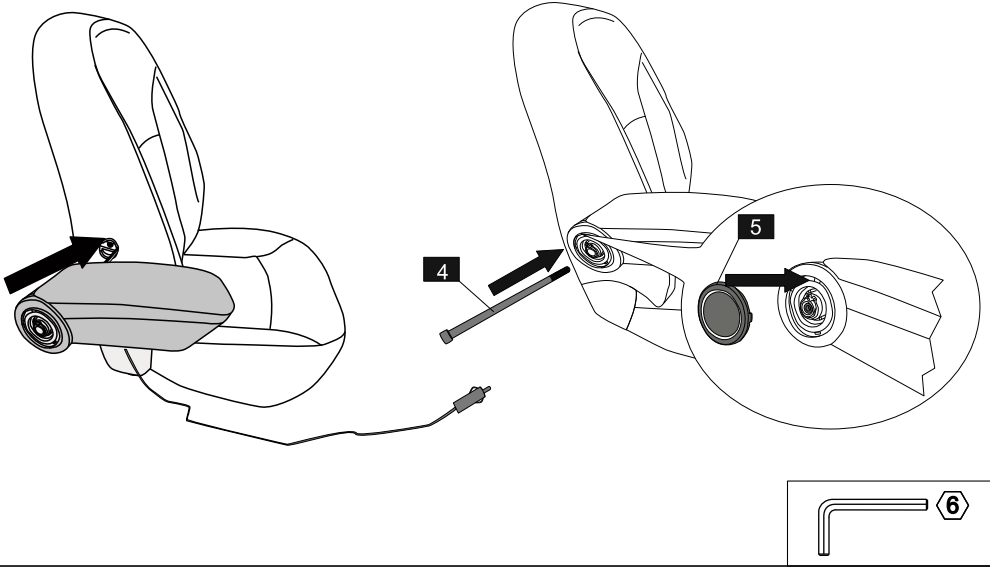

11

